




INSTALLATION INSTRUCTIONS
MODELS: LD-2300 & LD-2300-S

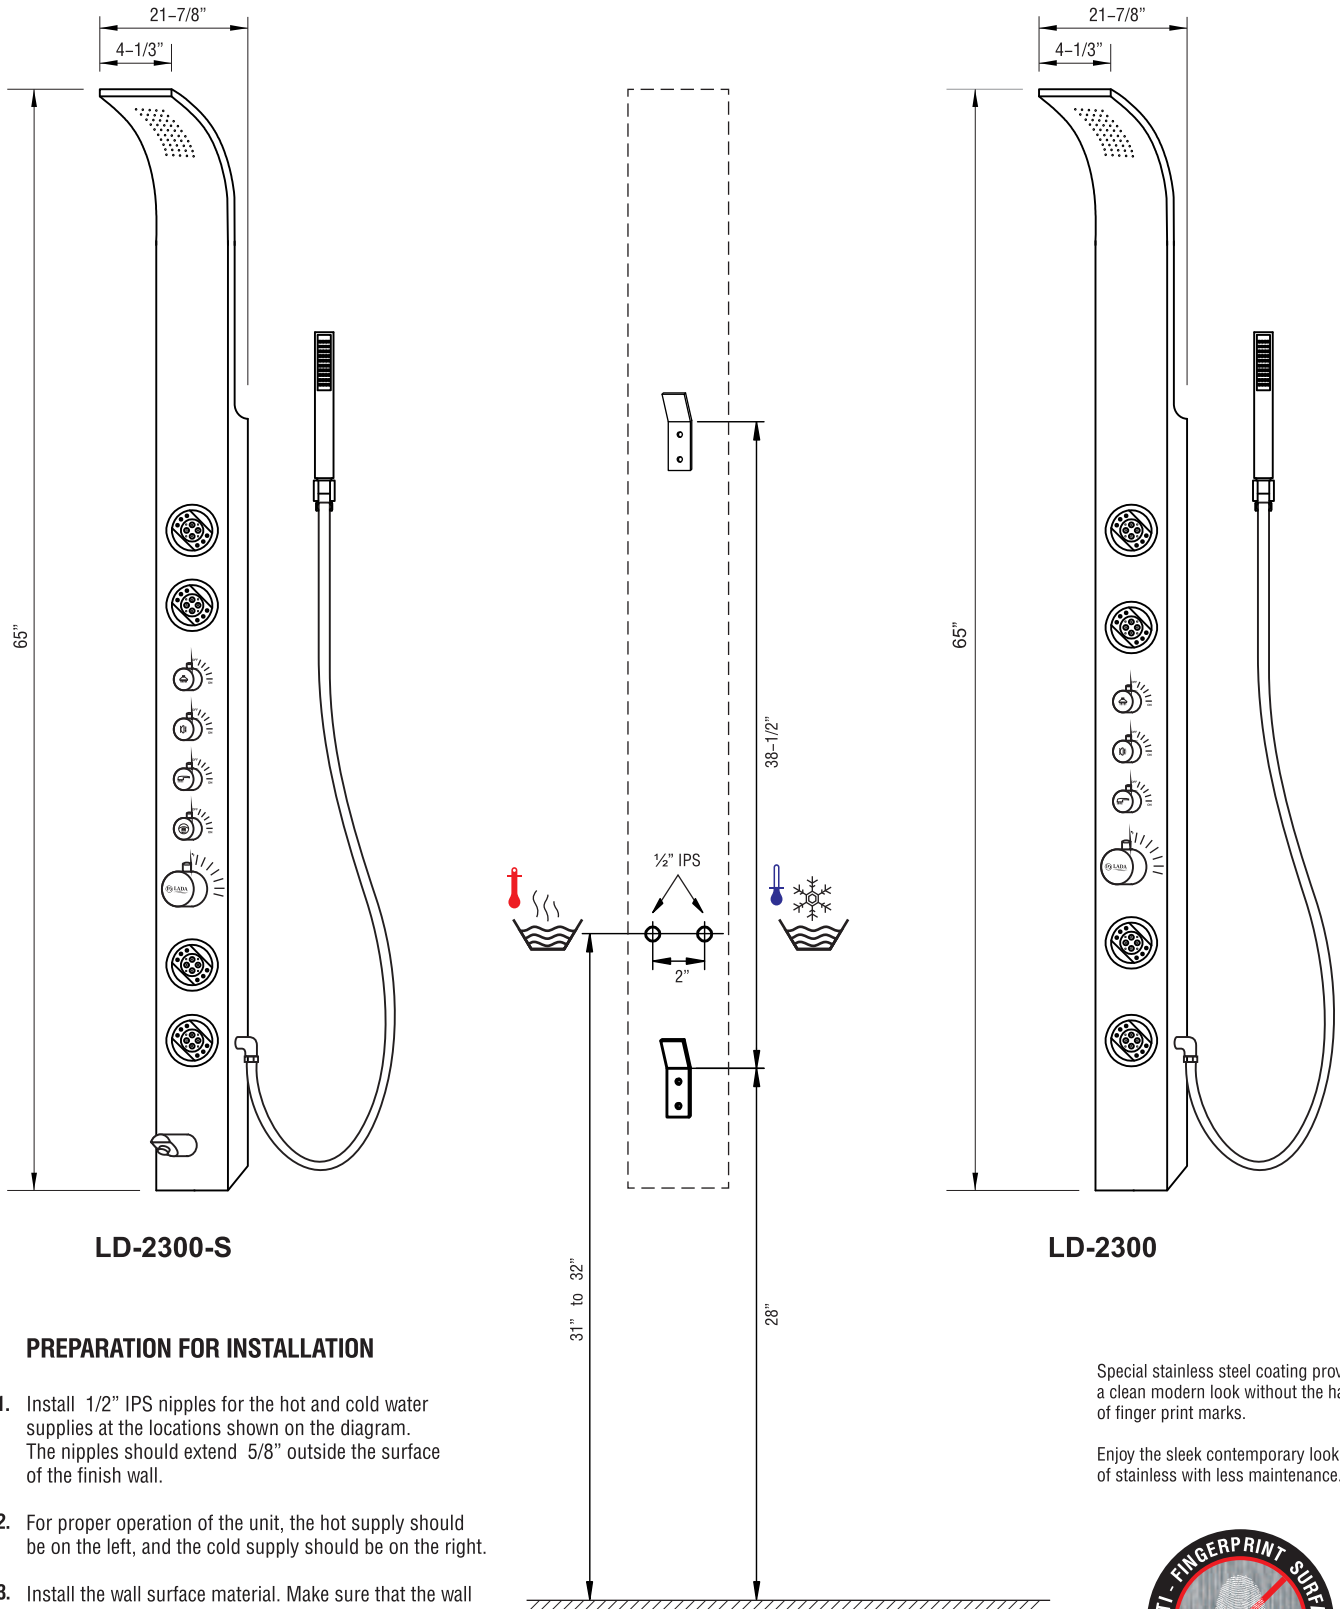

LD-2300-S

LD-2300

PREPARATION FOR INSTALLATION

1. Install 1/2" IPS nipples for the hot and cold water supplies at the locations shown on the diagram. The nipples should extend 5/8" outside the surface of the finish wall.
2. For proper operation of the unit, the hot supply should be on the left, and the cold supply should be on the right.
3. Install the wall surface material. Make sure that the wall is watertight before installing the panel.

Special stainless steel coating provides a clean modern look without the hassle of finger print marks.

Enjoy the sleek contemporary look of stainless with less maintenance.

All dimensions are approximate and subject to change without prior notice. Please refer to actual product before installation.

